


MX: MANUAL

 
The light is locked for shipment, refer to OPERATION instruction to unlock. Read this manual carefully before using and keep for future reference. Visit www.moon-sport.com for manual updates.

CONTENTS

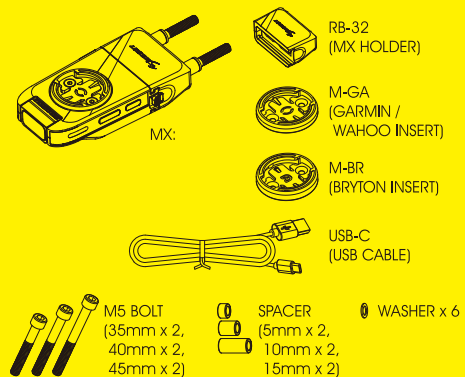

Optional accessories:
USB-C-RMS (Remote control)
RB-33 (MX Handlebar holder)

OPERATION




ON / OFF : Press **B1** 1s
MODE SELECT : Click **B1**
STEADY / FLASH : Press and hold **B1** 3s
BOOST MODE : Double click **B1**
LOCK/UNLOCK : 1. Power off
2. Press **B1** 5s: Locked / Unlocked



* Lock system: Lock the light to prevent accidentally turned on.
* Mode memory: The light resumes previous mode upon next usage.

VARIABLE LUMEN SYSTEM

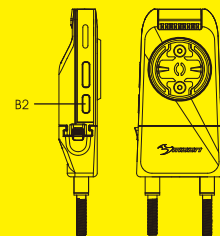

1. Select desired mode.
2. Press and hold **B2** to set lumen.
3. Release **B2** when reaching desired lumen.

* Light flashes once when reaching the MAX or MIN lumen level.

* Restore default setting: Press **B1** **B2** 5s

 



* Mode memory: The light resumes previous VLS setting upon next usage.

DUAL COLOUR BEAM


Dual angle beam is designed for user to select wide or narrow angle beam for different road section.

BEAM SELECT: Click **B2**

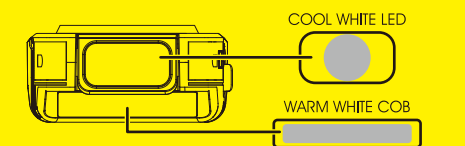


ADJUSTABLE BEAM ANGLE

 The beam angle is adjustable.



⚠ LED is hot in use! Only adjust angle when cool down.

CHARGING

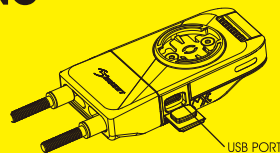

1. Power off.
2. Plug USB cable to USB port.
3. Unplug after fully charged.

* Do not charge over 5V.
* Keep away from flammable objects while charging.
* Recharge time: 2:45 hrs

LOW BATTERY AND CHARGING INDICATOR

Working indicator



Low battery indicator



Charging indicator



Charged indicator



RUNTIME



	BOOST	MODE1	MODE2	FLASH1	STEADY FLASH	DAY FLASH	SOS
DEFAULT LUMEN	400	250	100	100	300	400	-
H:MIN	1:30	2:15	6:00	34:00	12:45	43:15	24:45
VLS LUMEN	-	300-20	300-20	400-20	400-20	400-20	-
H:MIN	-	1:45-31:00	1:45-31:00	10:45-102:00	11:30-26:00	43:15-156:00	-

	BOOST	MODE1	MODE2	FLASH1	STEADY FLASH	DAY FLASH	SOS
DEFAULT LUMEN	400	300	100	100	150	300	-
H:MIN	1:30	2:00	6:00	34:00	21:45	46:45	28:00
VLS LUMEN	-	300-20	300-20	300-20	300-20	300-20	-
H:MIN	-	2:00-33:45	2:00-33:45	11:00-106:00	13:00-30:45	46:45-156:00	-

	BOOST	MODE1	MODE2	FLASH1	STEADY FLASH	DAY FLASH	SOS
DEFAULT LUMEN	400	100	50	50	100	200	-
H:MIN	1:30	6:00	11:00	51:15	34:00	59:30	64:15
VLS LUMEN	-	100-15	100-15	200-20	200-20	200-20	-
H:MIN	-	6:00-38:45	6:00-38:45	17:00-110:00	22:30-54:30	59:30-158:00	-

⚠ Use the SOS sign for real emergency only!

 STEM MOUNTING

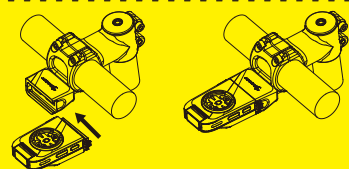


COMPUTER INSTALLATION




INSTALLATION :


GARMIN COMPUTER (M-GA)

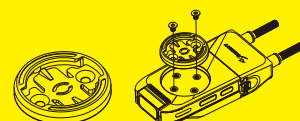

WAHOO COMPUTER (M-GA)

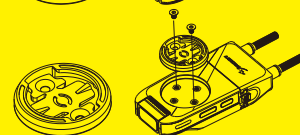

BRYTON COMPUTER (M-BR)

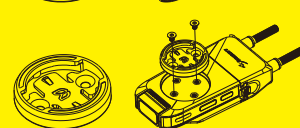

⚠ Warning

- * The setup procedures are serving for a bike only.
- * Any improper setup or installation which does not follow original design intentions may result in damage of bike and/or personal injury.
- * Check and torque all bolts periodically.

WARNING

Understand country lighting laws and regulations before use.
Do not shine light directly into eyes.
Do not blind near wireless computer.
Do not blind the oncoming vehicles. Always adjust the angle downward.
Do not submerge the light into water.
Keep light in cool and dry place when storing.
Fully recharge the light at least every 3 months during storage.

WARRANTY

MOON lights are covered by a ONE YEAR LIMITED WARRANTY while MOON batteries are covered by 120 days warranty from the date of purchase. This warranty covers the defects in material and workmanship only with proof of purchase. Please contact original dealer for warranty service. For lights bought on MOON website, please contact cs@moon-sport.com for help.

ONLINE WARRANTY REGISTRATION

Visit www.moon-sport.com for online warranty registration.