


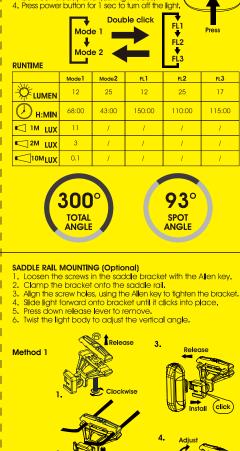

Method 2



Anticlockwise

. Press power button to turn on the light,

Press power button to choose modes.

between steady and flashing modes.

3. Double click power button to toggle



BATTERIES CHANGING

3. Install the bottom case.

1. Open the bottom case with finger,

Do not mix new and old batteries,

* Install batteries in correct direction.


2. Install batteries align with "

","

"poles.

Remove batteries from light for storage.

4. Wrapping rubber strap ground seatpost and stretching strap around hook to secure. 5. Slide the light forward onto bracket until it clicks into place. 6. Press down release lever to remove.

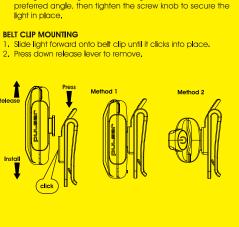

Read this manual carefully before using and keep for future

reference, Visit www.moon-sport.com for manual updates,

Power Button

Please include your full contact information (name, address, phone number, and email [if applicable]), and a description of the issue. For more information please contact us at cs@moon-sport.com

Visit the following link for online warranty registration:

ONLINE WARRANTY REGISTRATION

www.moon-sport.com/warranty

MOON Lights are covered by a ONE YEAR LIMITED WARRANTY from the date of purchase is free from defects in material and workmanship. This warranty does not apply to damage due to heat, physical damage resulting from abuse, neglect, improper repair, improper fit, or alterations of the fixture. This

WA-MOON-PULSAR-1711

covers the lights and cables only. Batteries are covered by 120 days