

moon

INDICATOR

## CERBERUS CE-PP (RUBBER PAD) 20-26 mm 26-35 mm 35-52 mm USB-C (USB CABLE) **RUNTIME** LUMEN 25 25 25 150

2:30

50-5

1:30-13:00

**AUTO SAFE MODE** 

mode with less light output for extra 45mins.

Recharge battery for maximum performance.

Safe mode cannot be override,

H:MIN VL<sub>2</sub>

LUMEN

1:30

50-5

1:30-13:00

To preserve battery when power is low, the light will enter safe

12:00

100-10

3:30-32:00

9:00

100-10

5:30-15:00

The light is locked for shipment, refer to OPERATION instruction to unlock.

Read this manual carefully before using and keep for future

reference. Visit www.moon-sport.com for manual updates.

**CONTENTS** 



## 2, Press ( 8s: Locked Unlocked :1 \* Lock system: Lock the light to prevent accidentally turned on, \* Mode memory: The light resumes previous mode upon next usage. MOUNTING RUBBER PAD INSTALLATION SEATPOST MOUNTING CHARGING 1. Power off 2. Plug USB cable to USB port 3. Unplug after fully charged \* Do not charge over 5V.

\* Keep away from flammable objects while charging,

INDICATOR

battery

**OPERATION** 

MODE SELECT : Click (

STEADY / FLASH : Double Click 🗸 LOCK/UNLOCK: 1, Power off

: Press 🕜 1s

ON / OFF



WA-MOON-CERBERUS-LINK-2005

1. Select desired mode.

2. Press and hold 3 to set lumen.

\* Light flashes once when reaching the MAX or MIN lumen level.

3. Release 3) when reaching desired lumen.

VARIABLE LUMEN SYSTEM

## 1. Restore default setting of headlight and taillight, Press (4+3) 5s (\*May connect up to 5 taillights) 2. Wireless connection will be connected automatically. OPERATION . All connected tailliahts are operated simultaneously. ON / OFF : Press C 1s MODE SELECT : Click ( STEADY / FLASH : Double Click 🗸 : Press and hold 3) to set lumen. VLS INDICATOR - CONNECTION Connecting Connected For power saving purpose (to pause the wireless connecting

signal), make sure to lock the light when not in use or after charging.

·IILINKIII