

TOTAL

ANGLE


OPERATION

Read this manual carefully before using and keep for future

FL1 FL2 DAY FL


10




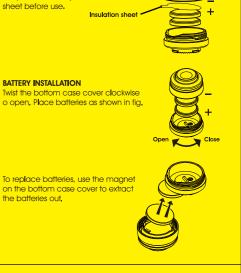

To preserve battery when power is low, the light will enter low

output flashing mode for 1hr. Safe mode cannot be override.

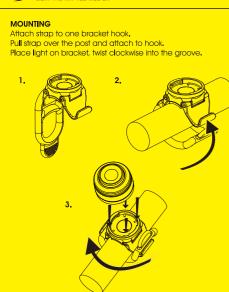

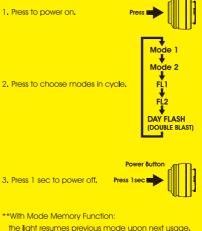

AUTO SAFE MODE

INITIAL USE

Twist the bottom case cover clockwise to open. Take away the insulation

Understand country lighting laws and regulations before use.

A WARNING

does not apply to damage due to heat, physical damage resulting from

abuse, neglect, improper repair, improper fit, or alterations of the fixture. This

covers the lights and cables only.

- MOON Lights are covered by a ONE YEAR LIMITED WARRANTY from the date of
- purchase is free from defects in material and workmanship. This warranty

- Keep the light away from fire and combustible materials.

For more information, please contact us at cs@moon-sport.com.

WA-MOON-MERAK-FRONT-1705

Do not leave the light on and unattended.

Replace the batteries for maximum performance.

Do not dismantle the light which will void warranty.

Do not shine directly in the eyes.

Do not submerge the battery or the whole light into water.