

30000) LED

2:30-52:00

3:00

200-5

3:00-100:00


2:30-52:00

8:00

200-5

3:00-100:00

MODE1 MODE2

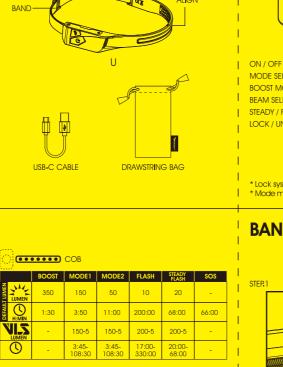



↑ Use the SOS sign for real emergency only!

The light is locked for shipment, refer to OPERATION instruction to unlock.

Read this manual carefully before using and keep for future reference. Visit www.moon-sport.com for manual updates.

CONTENTS

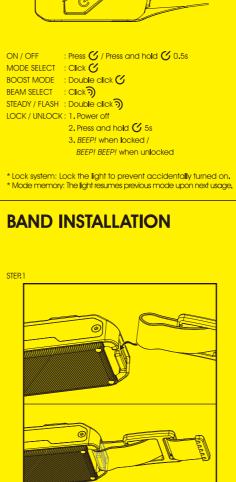

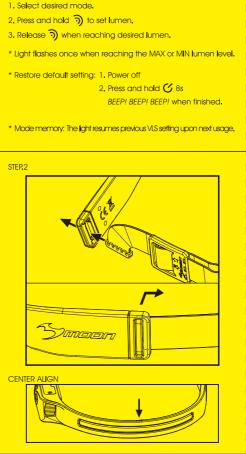

VARIABLE LUMEN SYSTEM

-VLS BUTTON



WA-MOON-U-1910

SOUND ALARM SYSTEM

50% - beep! (1time)

CHARGING O

25% - beep! beep! (every 10mins) 10% - beep! beep! beep! (every 10mins)

CHARGING

SAS beeps when battery is low,

BAND INSTALLATION

POWER BUTTON

OPERATION