




The light is locked for shipment, refer to OPERATION instruction to unlock,

Read this manual carefully before using and keep for future reference. Visit www.moon-sport.com for manual updates.

CONTENTS

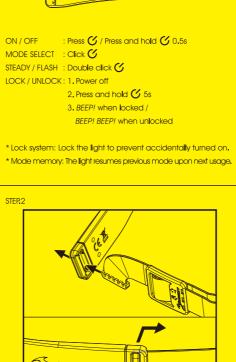

- POWER BUTTON

OPERATION

I STEP.2

CENTER ALIGN



VARIABLE LUMEN SYSTEM

POWER BUTTON

VIZ

1. Select desired mode.





SOUND ALARM SYSTEM

50% - beep! (1time)

25% - beep! beep! (every 10mins) 10% - beep! beep! beep! (every 10mins)

CHARGING

SAS beeps when battery is low,

RUNTIME ••••• COB 200 100 20 51:30 3:00 105:30 37:30 1:30 200-5 200-5 200-5 200-5 1:30-7:40-156:00 10:00-37:00

51:30

↑ Use the SOS sign for real emergency only!

51:30

32:00