RUNTIME Mix MODE1 400 1:30 6:00 1:10 400-10 400-10

TOTAL LED

100

1:30-52:00

8:00

300-5

2:00-102:00

1:30-52:00

2:00

300-5

2:00-102:00

U-PRO MANUAL



⚠ Use the SOS sign for real emergency only!

66:00

The light is locked for shipment, refer to OPERATION instruction to unlock.

Read this manual carefully before using and keep for future reference. Visit www.moon-sport.com for manual updates.


U PRO

CONTENTS



OPERATION

POWER BUTTON

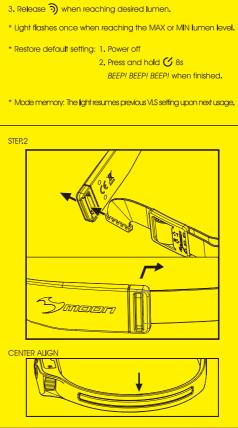

VARIABLE LUMEN SYSTEM

-VLS BUTTON

712

1. Select desired mode.

2. Press and hold 3) to set lumen.



Visit www.moon-sport.com for online warranty registration.

WA-MOON-U-PRO-2205

SOUND ALARM SYSTEM

50% - beep! (1time)

CHARGING O

25% - beep! beep! (every 10mins) 10% - beep! beep! beep! (every 10mins)

CHARGING

SAS beeps when battery is low,