


Release #

Read this manual carefully before using and keep for future

reference, Visit www.moon-sport.com for manual updates,

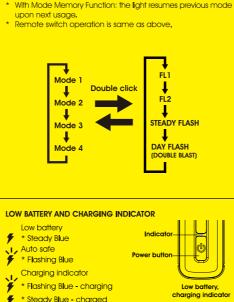

To preserve battery when power is low, the light will enter safe

mode with less light output for extra 1 hour. Safe mode cannot

5. Charging indicator will be on, Unplug the cable after fully charged,

USB charging or remote control port

be override, Recharge battery for maximum performance,

4. Plug the USB cable to wall or computer USB socket,

OPERATION


AUTO SAFE MODE

Turn off the light.

2. Lift the rubber cover.

BATTERY CHARGING AND CARE

3. Plug the USB cable into charging port.

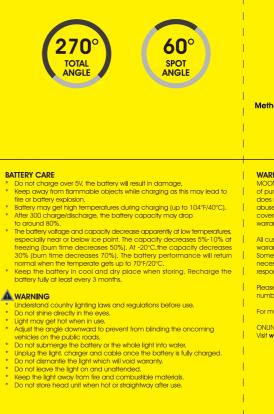

Mode1 Mode2 Mode3 Mode4 FL1 FL2 STEADY FL DAY FL


14:00

5:30 2:50 1:50 1:10 25:00 11:00 12:00

9.1 16.5 24.5 40.2

RUNTIME

Power Button

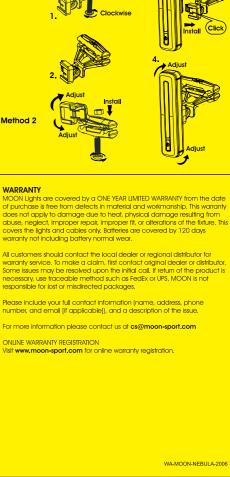

1. Loosen the screws in the saddle bracket with the Allen key.

3. Align the screw holes, using the Allen key to tighten the bracket.

4. Slide light forward onto bracket until it clicks into place.

6. Twist the light body to adjust the vertical angle.

SADDLE RAIL MOUNTING

Method 1

2. Clamp the bracket onto the saddle rail,

5. Press down release lever to remove,